


IMPORTANT ACR® 4 UPDATE INFORMATION

Further user enhancements have been made to the ACR® 4 Hot Bonder to improve your overall product experience. These upgrades provide additional features, enhancements, and clarity to the ACR® 4 Hot Bonder system.

Please make every effort to upgrade your software and/or firmware as soon as possible to ensure optimal performance of your ACR® 4 Hot Bonder.


Software Updates

The ACR 4 software can be updated via the USB drive for new features or improvements.

- ▶ Download the software update file(s) from an official BriskHeat source. Do not download or install software update files not provided by BriskHeat.
- ▶ Save the software update files onto a USB drive in the top-level folder. If the files are in a sub-folder, they will not be detected.
- ▶ Insert the USB drive into the ACR® 4 USB port.
- ▶ On the Home screen, touch the System Menu button. 
- ▶ Select Operator Interface Settings from the System Menu.
- ▶ Select the Software Update option.

Operator Interface Updates

- ▶ Press Next to update the Operator Interface.
- ▶ Select a file with the ".swu" extension and press Update Software.
- ▶ The update process will take approximately 2 minutes.
- ▶ Make sure to eject the USB drive before removing it.

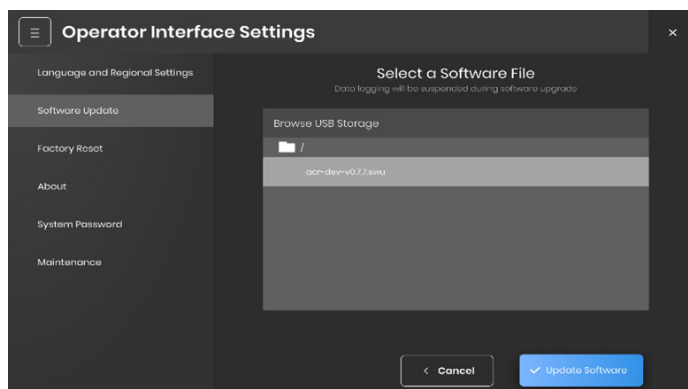

IMPORTANT ACR® 4 UPDATE INFORMATION

Zone Firmware Updates

- ▶ Select the Zone Firmware tab to the right of OI Software.
- ▶ Press Next to update the Zone firmware.
- ▶ Select a file with the “.toml” extension and press Update Firmware.
- ▶ The update process will take approximately two (2) minutes.
 - ▶ The progress will appear as 0%, 50%, 100%.
- ▶ Make sure to eject the USB drive before removing it.

